

XBox One Wireless Controller Case Unlock



Step 1.


Use prying tool slide start from point 1 to position around point 2. Then use your finger to grip and pull out the side cover. Do it again on the other side.



Step 2.


Use T8 screwdriver remove the screws as the picture shown.

Turn front side up and remove the front cover. Then take away the back cover.

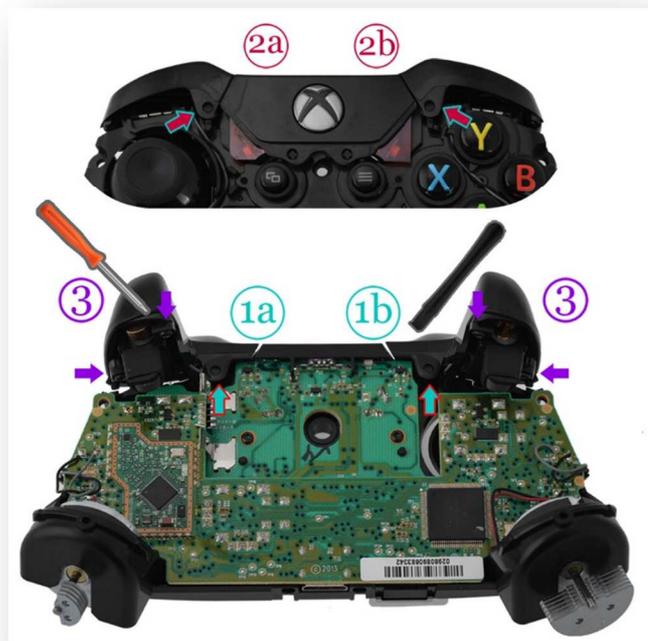

Step 3.

Use prying tool to remove the Bumper. Follow step from point 1a and use finger to hold the button, then point 2a and so on.

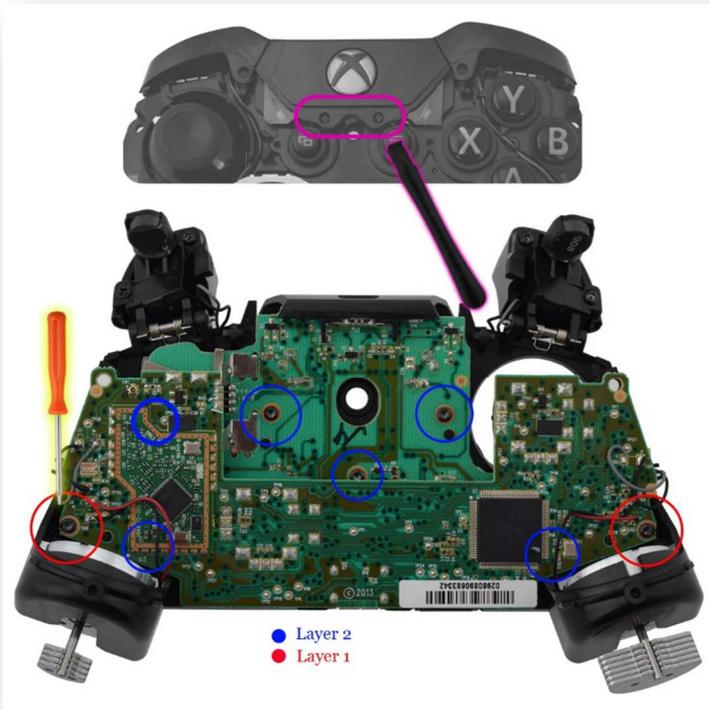

Step 4.

Press and hold down the Xbox Button, remove the Top Cover with prying tool.

Step 5.

Use T6 screwdriver to remove 8 screws as the picture located. Gently pick up the 1st layer PCB board then the 2nd layer.

Step 6.

Pick up the 2nd layer PCB (you can totally take out from controller shell), replace the Menu and View buttons.

To install the case, just do the above 6 step rewind.

- END -