 




Brook

Game Controller Super Converters

PS3/PS4 ↔ Mega Drive/PC Engine Controller Adapter

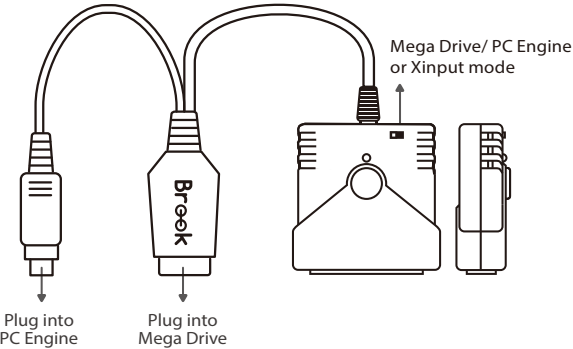

step. 1

 
Connect the converter to Mega Drive/ PC Engine and turn on the gaming console.

step. 2

Connect the PS3/PS4/Switch controller to the Super Converter via standard USB cable, the registration of the controller starts automatically. When the controller LED turns on, the registration is finished.

step. 3

If the controller does not work correctly due to insufficient power, please connect the micro USB port to the 5V/1A Charger by splitter cable.

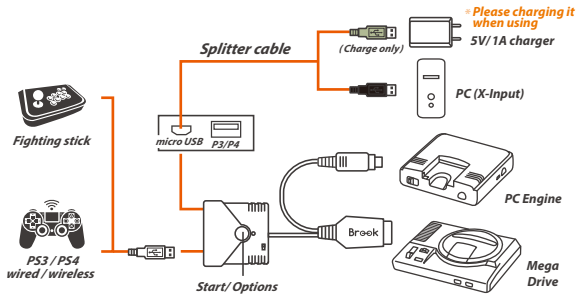

Wireless Setting

After the PS4 / PS3 / Switch controller (DUALSHOCK 4/3) paired with this product. You can use it wirelessly.

Step. 1

 
Connect the converter to Mega Drive/PC Engine and turn on the gaming console.

Step. 2

Connect the PS3/PS4/Switch controller to the Super Converter via standard USB cable

Step. 3

The USB cable is removed and the controller is ready for wireless use.

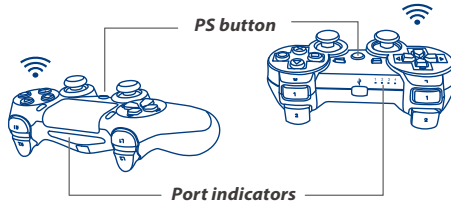

How to Change two modes?

There are 2 types of Mega Drive controllers (3 buttons and 6 buttons), you can switch settings as needed:

3 buttons controller(default):

Hold down **PS + △** for 3 seconds to see the green LED flash 3 times.



6 buttons controller:

Hold down **PS + □** for 3 seconds to see the green LED flash 3 times.



For more Details please visit our official website at www.brookaccessory.com
201905V1


MD Game Pad 3 buttons	MD Game Pad 6 buttons	PC Engine	PC (X-Input)	PS4 Game Pad	PS3	SW Pro Game Pad
DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
	A	II-1	×	×	×	B
C	B	I-1	○	○	○	A
A	X	II-3	□	□	□	Y
B	Y	I-3	△	△	△	X
Start	Start	Run	Start	Options	Start	+
	Mode	Select	Select	Share	Select	-
DPad (L/R)	DPad (L/R)	DPad (L/R)	Lx	Lx	Lx	Lx
DPad (U/D)	DPad (U/D)	DPad (U/D)	Ly	Ly	Ly	Ly
			Ry	Ry	Ry	Rx
			Rx	Rx	Rx	Ry
	Z		L1	L1	L1	L
	Z		R1	R1	R1	R
	C	II-2	L2	L2	L2	ZL
	C	I-2	R2	R2	R2	ZL
			L3	L3	L3	LTSB
			R3	R3	R3	RTSB
			XBOX	PS Key	PS Key	Home
				TP		Capture



Brook

Game Controller Super Converters

 PS3/PS4 ↔ Mega Drive/PC Engine Controller Adapter

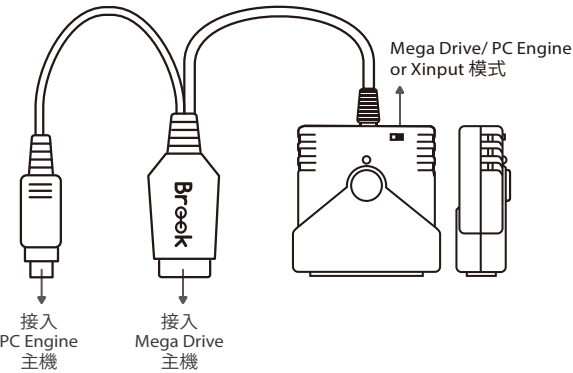

step. 1

 
將轉接器連接到 Mega Drive/PC Engine 遊戲機接口, 接好後開啟遊戲機。

step. 2

將 PS4/ PS3/ Switch 控制手把透過 USB 線連接到轉接器的 USB 接口。當紅色 LED 從閃爍變為恆亮時, 連接完成。

step. 3

如果由於電量不足導致控制器無法正常工作, 請將附帶的 micro USB 線連接到可以供電的 USB 設備, 例如 USB AC 充電器。

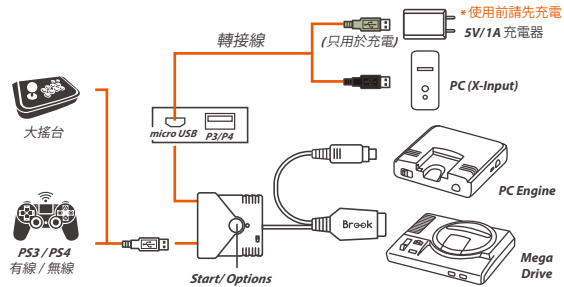

無線控制設定

在 PS4 / PS3/ Switch 控制手把 (DUALSHOCK4/ 3) 與本產品配對後 將可以移除USB線使用無線控制。

Step. 1

 
將轉接器連接到 MD 或 PCE, 並開啟 Mega Drive/ PC Engine 遊戲主機。

Step. 2

使用把手原廠USB線將 PS4/ PS3/ Switch 控制器連接到轉接器USB接口。

Step. 3

確認控制器正常工作後, 拔除原廠USB線即可無線使用。

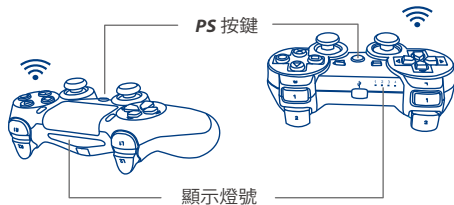

如何切換至3鍵/6鍵手把模式?

Mega Drive 提供兩種不同類型的控制器 (3 個按鈕和 6 個按鈕), 您可以根據需要切換設置:

3個按鈕控制器 (預設):

按住 **PS + △** 3秒鐘, 看到綠色LED閃爍3次。



6鍵控制器:

按住 **PS + □** 3秒鐘, 看到綠色LED閃爍3次。



更多詳細操作請上官網查詢
www.brookaccessory.com

201905V1

MD Game Pad 3 buttons	MD Game Pad 6 buttons	PC Engine	PC (X-Input)	PS4 Game Pad	PS3	SW Pro Game Pad
DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
	A	II-1	×	×	×	B
C	B	I-1	○	○	○	A
A	X	II-3	□	□	□	Y
B	Y	I-3	△	△	△	X
Start	Start	Run	Start	Options	Start	+
	Mode	Select	Select	Share	Select	-
DPad (L/R)	DPad (L/R)	DPad (L/R)	Lx	Lx	Lx	Lx
DPad (U/D)	DPad (U/D)	DPad (U/D)	Ly	Ly	Ly	Ly
			Ry	Ry	Ry	Rx
			Rx	Rx	Rx	Ry
	Z		L1	L1	L1	L
	Z		R1	R1	R1	R
	C	II-2	L2	L2	L2	ZL
	C	I-2	R2	R2	R2	ZL
			L3	L3	L3	LTSB
			R3	R3	R3	RTSB
			XBOX	PS Key	PS Key	Home
				TP		Capture