

## E3 Card Reader Manual to break PS3

When you first install your new E3 card reader, simply insert into pc, after a few seconds, PC will display 3 drives., They will be **E3\_4M\_Stick DISK**, **E3Upgrader DISK** and **Removable DISK(SD slot)**

**E3\_4M\_Stick DISK** is 4MB FLASH on board, to save any software smaller than 4MB

**E3Upgrader DISK** is specially for upgrade E3 Card Reader firmware

**Removable DISK(SD slot)** is for Micro SD, Max supporting to 32GB, can save any software into it



Now download e3 card reader firmware from internet(they are free), and copy into E3Upgrader DISK, 1 second finish programme, and blue light lighting

Then can break ps3 with e3 card reader, same way as other chip..

### How to use Dual Boot Mode

After upgrade E3 with e3 firmware, it boot ps3 with Hermes V4B FW.

If you insert Micro SD into e3, even a blank SD, it will boot ps3 with Kakaroto FW.

### How to use free PSGROOVE

After upgrade E3 with e3 firmware, then do as following:

1: Download any PSGROOVE, if it is hermes fw, change name into h, so will be h.hex , and copy into E3\_4M\_STICK, then can break ps3 with free hermes fw (any version hermes fw works)

2: if it is Kakaroto fw, change name into k, so will be k.hex , and copy into E3\_4M\_STICK, then can break ps3 with free Kakaroto fw (any version Kakaroto fw works)

becareful need change into small letter.

### How to copy backup manager.

Download and copy into E3\_4M\_STICK.

**E3 Card Reader have lots of other function, it will make public later.**